

**MAINTAINED/NON-MAINTAINED (OPTIONAL) ILLUMINATION SIGNS WITH WHITE LEDs**



TECHNICAL CHARACTERISTICS	MLD-28D/w	MLD-34D/w	MLD-44D/w
Mains voltage	220-240V AC/50-60Hz		
Maximum power consumption	3W / 7.5VA		3W / 8VA
Battery (Ni-Cd)	3.6V/1Ah		
Battery protection	Overcharging and full discharging protection		
Recharging time	24h		
Minimum emergency duration	3h		
Light source intensity (Mains / Emerg)	85lm/85lm		105lm/85lm
Degrees of cover protection	IP 40		
Class of cover protection	class II		
Produced in accordance with	EN 60598-1, EN 60598-2-22, EN 55015, EN 61547, EN 61000-3-2, EN 61000-3-3, EN 1838		
Operation temperature range	0 to 40 °C		
Relative humidity	up to 95%		
External panel's dimensions	280x100mm	340x170mm	440x220mm
External dimensions (LxWxH)	305x25x155mm	365x25x225mm	465x25x275mm
Typical weight	520gr.	850gr.	1310gr.
Guarantee	3 years (1 year for the battery)		

Thank you for purchasing this product of Olympia Electronics. A European manufacturer.

**GENERAL**

These sign illumination luminaires use a new technology, friendly to the environment, with high illuminated L.E.D.s. L.E.D. technology has very low power consumption.

The edge illumination sign is used as a maintained emergency lighting with indications symbols.

In this type of marking panels, the PVC overlay is mounted on the marking panel with 4 plastic screws, and it can be changed by change the PVC overlay in accordance with the desired result.

Each model combines modern, aesthetics, together with functionality. The exit illumination signs are used in every public area where clear direction and good appearance are important.

**NON-MAINTAINED OPERATION**

By default the illumination sign operates as maintained. The device has a possibility to operate as non-maintained. To change the maintained to non-maintained operation follow the relative instructions in page 6.

All models must be permanently connected to the mains power supply as shown on page 2.

The legend is screened on to a clear acrylic sheet which has the marking on the marking panel with the light that comes from the top of the luminaire and diffracts, giving light to the marking panel.

The luminaire has an indication (CHARGE) for the charging of the battery and a (TEST) button to TEST the emergency circuit and the LEDs for good operation only when the luminaire is powered by the mains power supply. The unit must be mounted in a clearly visible area and can either be hung on a ceiling or mounted on a wall depending on the requirements of the installation. The package

includes all the required materials for mounting on the wall or on the ceiling. The pages 2,3 and 4 show us the mounting methods.

**WARNING !!**

1. Read carefully this instruction manual.
2. The device must be connected to the mains power supply thru a fuse dependent by the total amount of the line's power load.
3. It is suggested to check every month the indication LED for battery charging, and by pushing briefly the TEST button to check the emergency circuit. The sign should light for a few seconds powered by the battery and then, will turn to normal operation. In the opposite condition contact the installer.
4. Every six months, a full duration check should be carried out by disconnecting the mains power supply. Count the autonomous duration of the luminaire and in case of no correspondence to stated emergency duration replace the battery. The replacement of the battery must be done using parts of the same type, by the manufacturer or by a competent person.
5. During long periods of inactive use (i.e 6 months), disconnect the batteries from the units.
6. **Replaced batteries must not be thrown into trash bins. They must be returned to special battery disposal points. Do not incinerate.**

NOTE: LED= Light Emitting Diode

**LABELING EXPLANATION:**

**X: Self contained**

**1: Maintained (\*)**

**A: Including test device**

**180: 3 hour duration**



(\*) Maintained operation: The luminaire lights its illumination source, when it is powered by the mains power supply or not.

Non-Maintained operation: The luminaire lights its illumination source, only in power supply's failure.


## Mounting methods

### Preparation procedure for ceiling mounting

**Attention!!!** Interrupt the mains power supply.

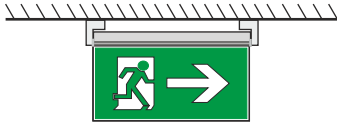


*Hanging installation on suspended ceilings using the special mounting brackets contained in the package.*



1. Open the pre-etched knock out and pass the cable thru.
2. Place the plastic part for mounting the sign.
3. Place the cable holding accessory and mount it by tightening the screw with the included grommet.
4. Connect the wires to the included terminal block and place it in the plastic mounting part.
5. Follow the procedure below (figure 1).


### Ceiling mounting

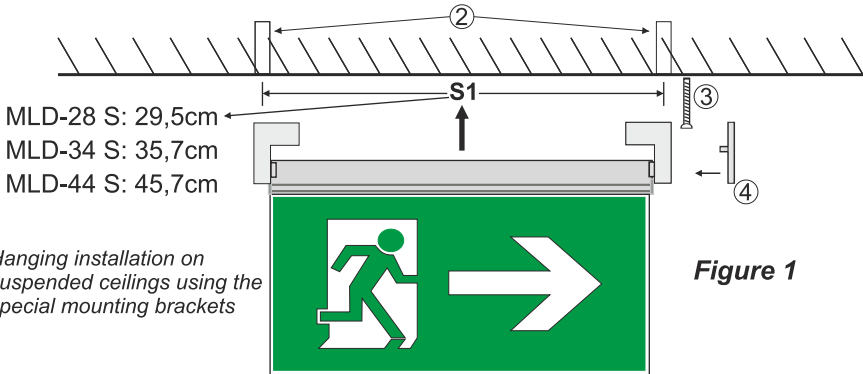

*Hanging installation on suspended ceilings using the special mounting brackets*


**Figure 1**

1. **Attention!!!** Choose the installation area to insure that the mounting surface is appropriate for the installation of the illumination sign.
2. Measure the space **S** according to the illumination sign's type and drill the appropriate holes in the ceiling for the installation of the included mounting plugs Nr 6.
3. Place the mounting plugs Nr 6 and mount the sign by tightening the included mounting screws.
4. Refit the plastic cover on each side.
5. Power the illumination sign and check the illumination sign's operation.

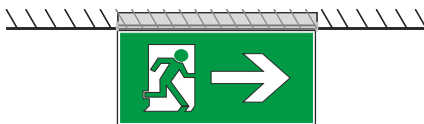


*Recessed mounted installation on suspended ceilings using the base type A-1018, A-1020, A-1021.*

### Suspended ceiling mounting bases

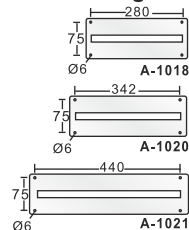

## Ceiling mounting

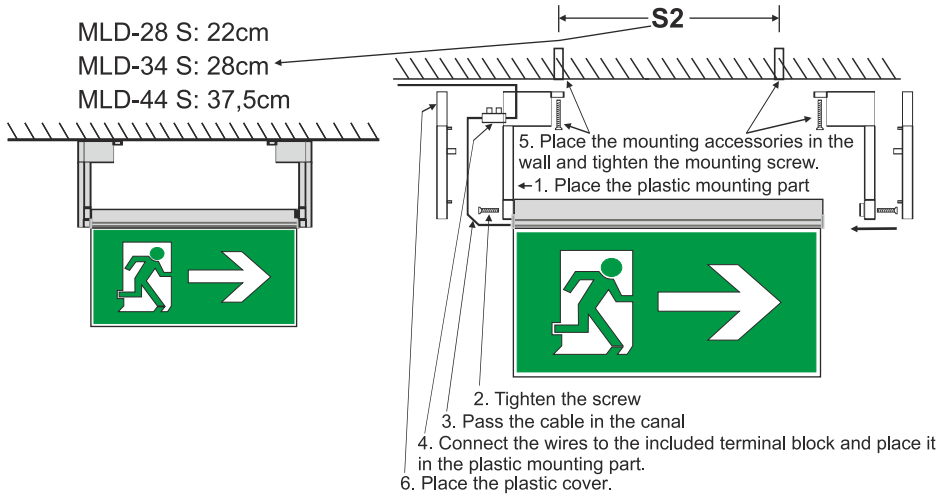

### OPTIONAL !!

*When a triple core cable must be used, then follow the figures 2,3 below.*

**Figure 2**




### ELECTRICAL BOX INSTALLATION


1. **Attention!!!** Interrupt the mains power supply.
2. Perform the preparation procedure for ceiling mounting on page 2 and exclude step 4.
3. Perform the procedure for ceiling mounting figure 1.
4. For the installation of the electrical box you may need to open holes in the ceiling and at it's cable entrances, for the entrance of the power and illumination sign's cables. Install the electrical box next to the sign so as to cover the cable (figure 2).
3. After mounted the electrical box open the cover and perform the electrical connection according to Figure 3. After the connection close the cover of the box.
4. Power the illumination sign and check the illumination sign's operation.

*Use a certified electrical box 250V AC (IP40) to perform the electrical connection, with minimum internal space 35x35x25mm to install the 3 pole terminal block. In this box install a certified 3 pole terminal block 250V AC/16A 2,5mm<sup>2</sup> providing terminals to connect the live wire L, the neutral N and the ground GND. To this terminal block is connected the power cable with a cross section of 1,5mm<sup>2</sup>. Install the electrical box in an appropriate area in the ceiling. Install securely the 3 pole terminal block and perform the connection according to figure 3.*

***The electrical box and the 3 pole terminal block are not provided by olympia electronics.***

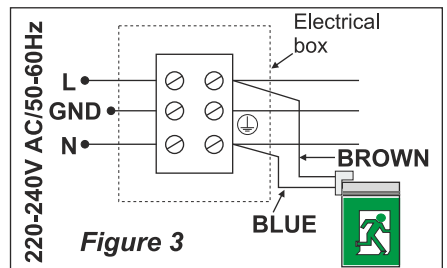


## Alternative mounting method

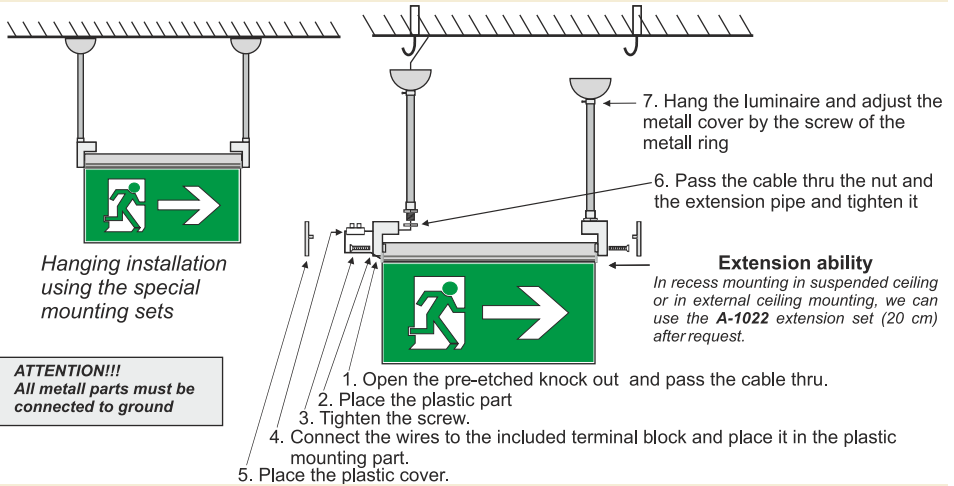

*Hanging installation using the special mounting sets*

**ATTENTION!!!**  
All metall parts must be connected to ground


## Wall mounting

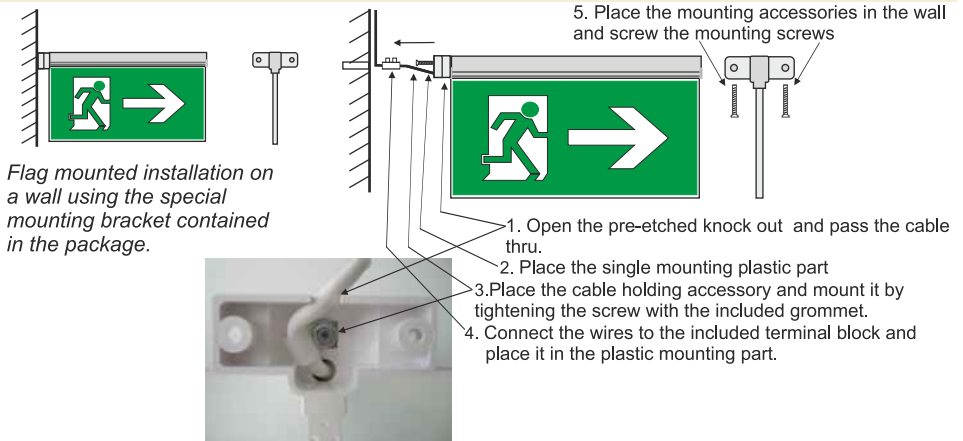


*Flag mounted installation on a wall using the special mounting bracket contained in the package.*



*Wall mounted installation using the special mounting brackets contained in the package.*

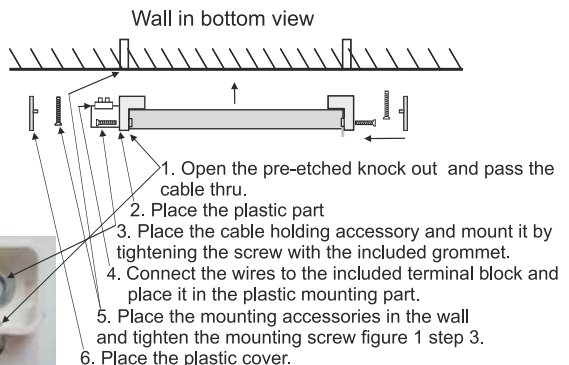

## Battery replacement process

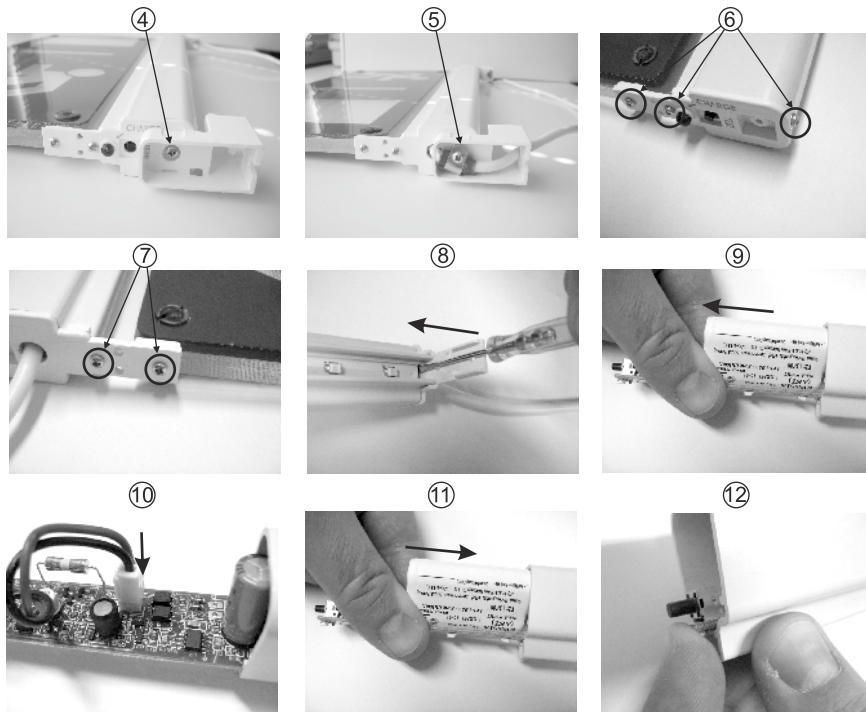

### **Before service interrupt the mains power supply.**

- ① Remove the plastic cover from each side. (figure 1, step 2).
- ② Unfasten the mounting screws to unmount the illumination sign (figure 1, step 4).
- ③ You have to disconnect the power supply wires of the sign from the terminal block.
- ④ Unfasten the mounting screw of the bracket and remove it.
- ⑤ Unfasten the mounting screw (with the cable holding accessory) of the bracket and remove the bracket.
- ⑥ Unfasten the 3 screws without moving the marking panel.
- ⑦ Unfasten the 2 screws and remove the marking panel.
- ⑧ Slide out the led strip with a flat blade screwdriver.
- ⑨ Pull carefully the led strip by holding it from the two sides as shown in picture.
- ⑩ Remove the used battery and place a new one with the same type A-939/HT with same cables and connector.
- ⑪ Push carefully the led strip by holding it from the two sides as shown in picture.
- ⑫ Push the led strip to face the edge of the plastic cover.
- ⑬ **ATTENTION !!! Don't apply force to the test button.**
- ⑭ Refit the removed parts in steps 7,6,5 and 4.
- ⑮ **WARNING!! Use a maximum torque of 0,25Nm to tighten the screws (step 6,7) and a maximum torque of 0,6Nm to tighten the screws (step 4,5).**
- ⑯ Mount the illumination sign with the mounting screws (figure 1, step 4).
- ⑰ Connect the power supply wires of the sign to the terminal block (step 3). Refit the plastic cover (figure 1, step 5) and power the illumination sign.

*In case that the led strip must be replaced to ensure lumen output LED module can be replaced only by a competent personnel.*

### **NOTE!!**

**After finishing the installation you must power the luminaire at least for 24 hours for battery charging to perform the named autonomy.**

## MAINTAINED TO NON-MAINTAINED SELECTION CAPABILITY

Power on the device and press continuously the TEST button for 10 seconds, until the led strip turns off. Release the button and after a short emergency test, the device operates as non-maintained. If you want to restore the previous condition (maintained operation), press continuously the TEST button for 10 seconds, until the led strip lights. Release the button and after a short emergency test, the device operates as maintained illumination sign.

### Troubleshooting

Trouble	Solution
1. The illumination sign does not light when the TEST button is pressed.	<p><u>The battery has lost it's energy</u> Wait at least for 1 hour for the battery to be charged.</p> <p><u>The battery is not connected</u> Attach the battery's connector to the appropriate connector on the P.C.B.</p> <p><u>The battery is inappropriate</u> The battery must be replaced.</p>
2. During the automatic 6month autonomous check, the illumination sign does not light or has less autonomy than the nominal.	<p><u>The battery has lost it's energy</u> Wait at least for 24 hours for the battery to be fully charged.</p> <p><u>The battery is inappropriate</u> The battery must be replaced.</p>
3. The illumination sign does not light in normal operation.	<p><u>The illumination sign is adjusted to operate as non-maintained</u> Choose (if you must) to turn the operation to maintained, according to relative paragraph in page 6.</p>
4. The illumination sign does not light during a mains failure.	<p><u>The battery has lost it's energy</u> Wait at least for 24 hours for the battery to be fully charged.</p> <p><u>The battery is not connected</u> Attach the battery's connector to the appropriate connector on the P.C.B.</p> <p><u>The battery is inappropriate</u> The battery must be replaced.</p>

### Package contents

The package contains:

1. The illumination sign
2. The instructions manual
3. Plastic bag with supporting materials.



### Electric connection and Eco Light dimensions in mm



MLD-28 : 305(a) x 95(b)  
 MLD-34 : 365(a) x 165(b)  
 MLD-44 : 465(a) x 215(b)

